

- Read all instructions carefully before installing.
- Ensure that power is off on the main panel before starting installation or performing any maintenance.
- Do not install this lighting system in a wet location.
- Do not install any fixture closer than 6 inches from any curtain or combustible material.
- Make sure that all screws are properly tightened.


Surface Mounting Instructions


Recommended ceiling cutout dimension: 53mm (2.08")


- 1. Make ceiling cutout to recommended dimension. Pull line, ground, neutral, and dimming lines through ceiling opening and connect to power supply (Fig. 1).
- 2. Pass connected power supply through ceiling opening and secure in ceiling, leaving power wires exposed for later connection to luminaire (Fig. 2).
- 3. Install mounting ring in ceiling, using screws included (Fig. 3).
- 4. Attach safety cable on mounting ring to safety cable on luminaire, using carabiner clip (Fig. 4).
- 5. Connect power wires from power supply in ceiling to luminaire with quick-connector (Fig. 5).
- 6. Insert luminaire upwards into mounting ring and turn luminaire clockwise until you hear a distinct click indicating that tabs are locked into position (Figs. 6A and 6B). Luminaire is locked into correct position when tabs are positioned as shown in Fig. 6C.

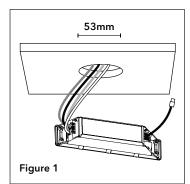


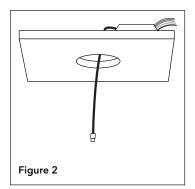


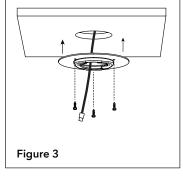


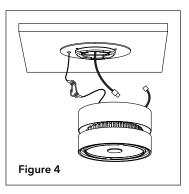


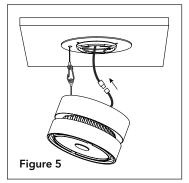

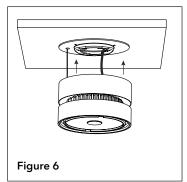

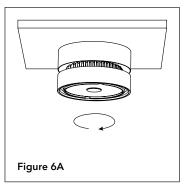

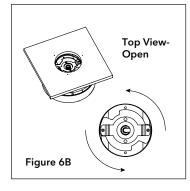

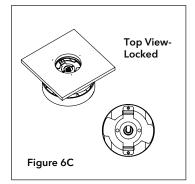

SORAA arc

Recessed (Untrimmed) Installation

Recommended ceiling cutout dimensions:

50mm Luminaire: 90mm (3.54") 100mm Luminaire: 125mm (4.92")

- 1. Make ceiling cutout to recommended dimension. Insert mud ring in ceiling (Fig. 1).
- 2. Attach mud ring to ceiling with screws (Fig. 2).
- 3. Insert protective plug into mud ring (Fig. 3)
- 4. Finish ceiling by plastering over mud ring (Fig. 4).
- 5. Remove mud ring plug. Pull line, ground, neutral, and dimming lines through ceiling opening and connect to power supply (Fig. 5).
- 6. Pass connected power supply through ceiling opening and secure in ceiling, leaving power wires exposed for later connection to luminaire (Fig. 6).
- 7. Locate power supply in ceiling, leaving power wires exposed for later connection to luminaire.
- 8. Attach safety harness from mud ring to luminaire with carabiner clip (Fig. 8).
- 9. Connect power wires from power supply in ceiling to luminaire with quick-connector (Fig. 9).
- 10. Insert luminaire into mud ring opening (Fig. 10). Turn luminaire clockwise (Fig. 11) until you hear a distinct click indicating that tabs are locked into position as shown in Fig. 12.


Note:


in case of "Anywhere Ring" installation, Steps 3 and 4 above may be omitted (no plastering needed). Recommended hardware: #8 Flat Head Self-Tapping Screw (4X).








WARNING: LUMINAIRES NOT SUITABLE FOR COVERING WITH THERMAL INSULATING MATERIAL

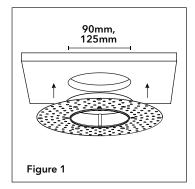


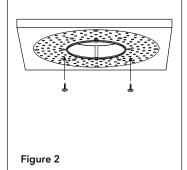


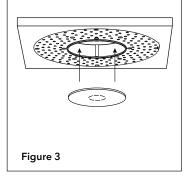


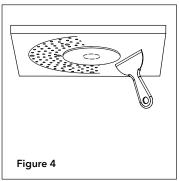


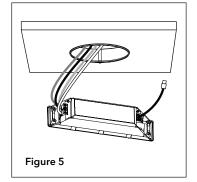


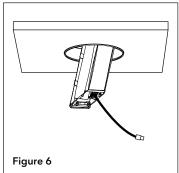


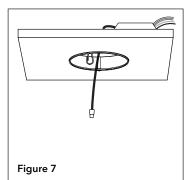


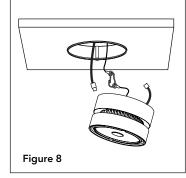

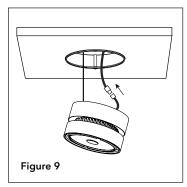


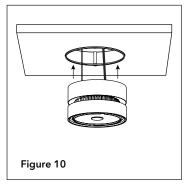

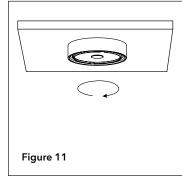

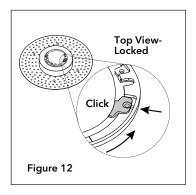

Recessed Mounting

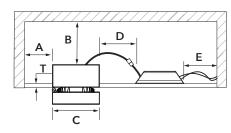

Minimum Space Requirements

A	≥ 60mm	
В	≥ 20mm	
С	≥ 20mm	
D	≥ 20mm	
E	≥ 20mm	
Т	5-32mm	